


EH7000-4R Breakdown

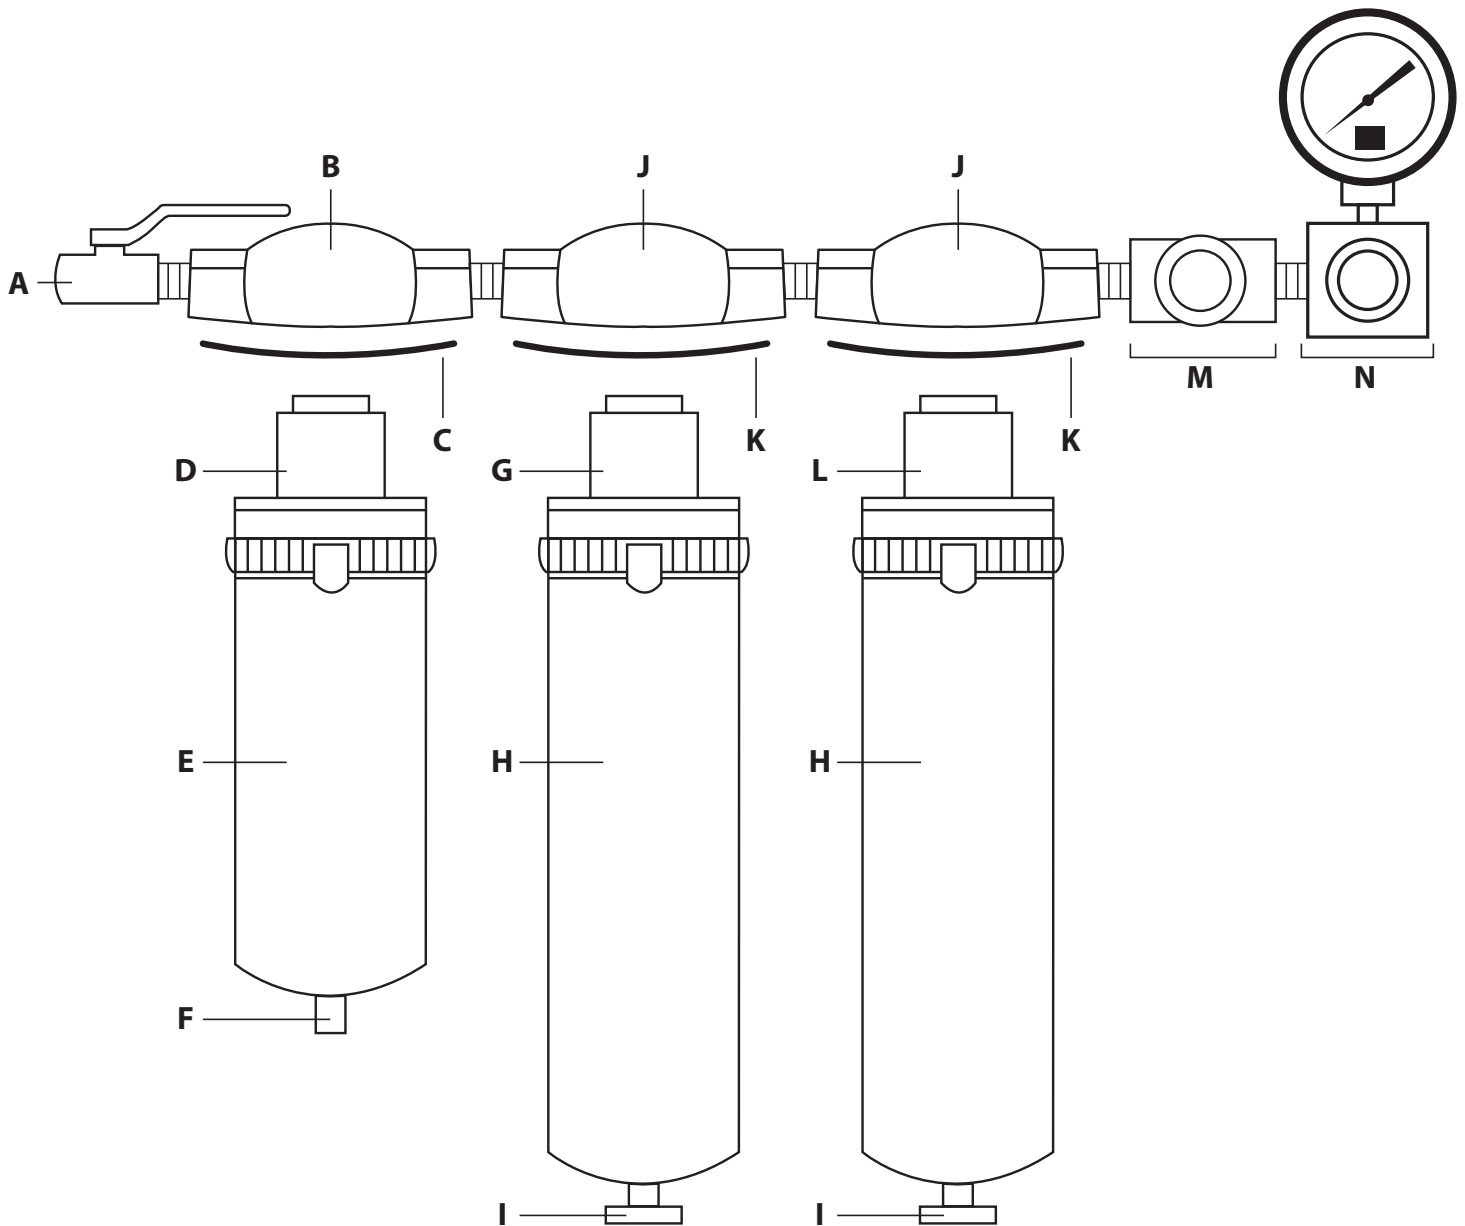

Description

- A** Ball Valve, 1/2"
- B** Replacement Head, 1st Stage
- C** Bowl O-ring, 1st Stage
- D** Replacement Element, 1st Stage
- E** Bowl Assembly, 1st Stage
- F** Automatic Drain, 1st Stage
- G** Replacement Element, 2nd Stage

Part

- BV-051
- WIL-040
- N32-95-257
- 4P-060
- N34-95-201
- N32-95-979
- 3C-090

Description

- H** Bowl Assembly, 2nd/3rd Stage
- I** Petcock Drain, 3/8"
- J** Replacement Head, 2nd/3rd Stage
- K** Bowl O-ring, 2nd/3rd Stage
- L** Replacement Element, 3rd Stage
- M** Moisture Indicator Assembly
- N** Regulator/Gauge, 1/2"

Part

- N34-15-180
- PC-03
- WIL-001M
- N32-95-256
- DE401
- RTi-04-CK
- RG40

