


Compressor Area Layout Sample

A054_0521

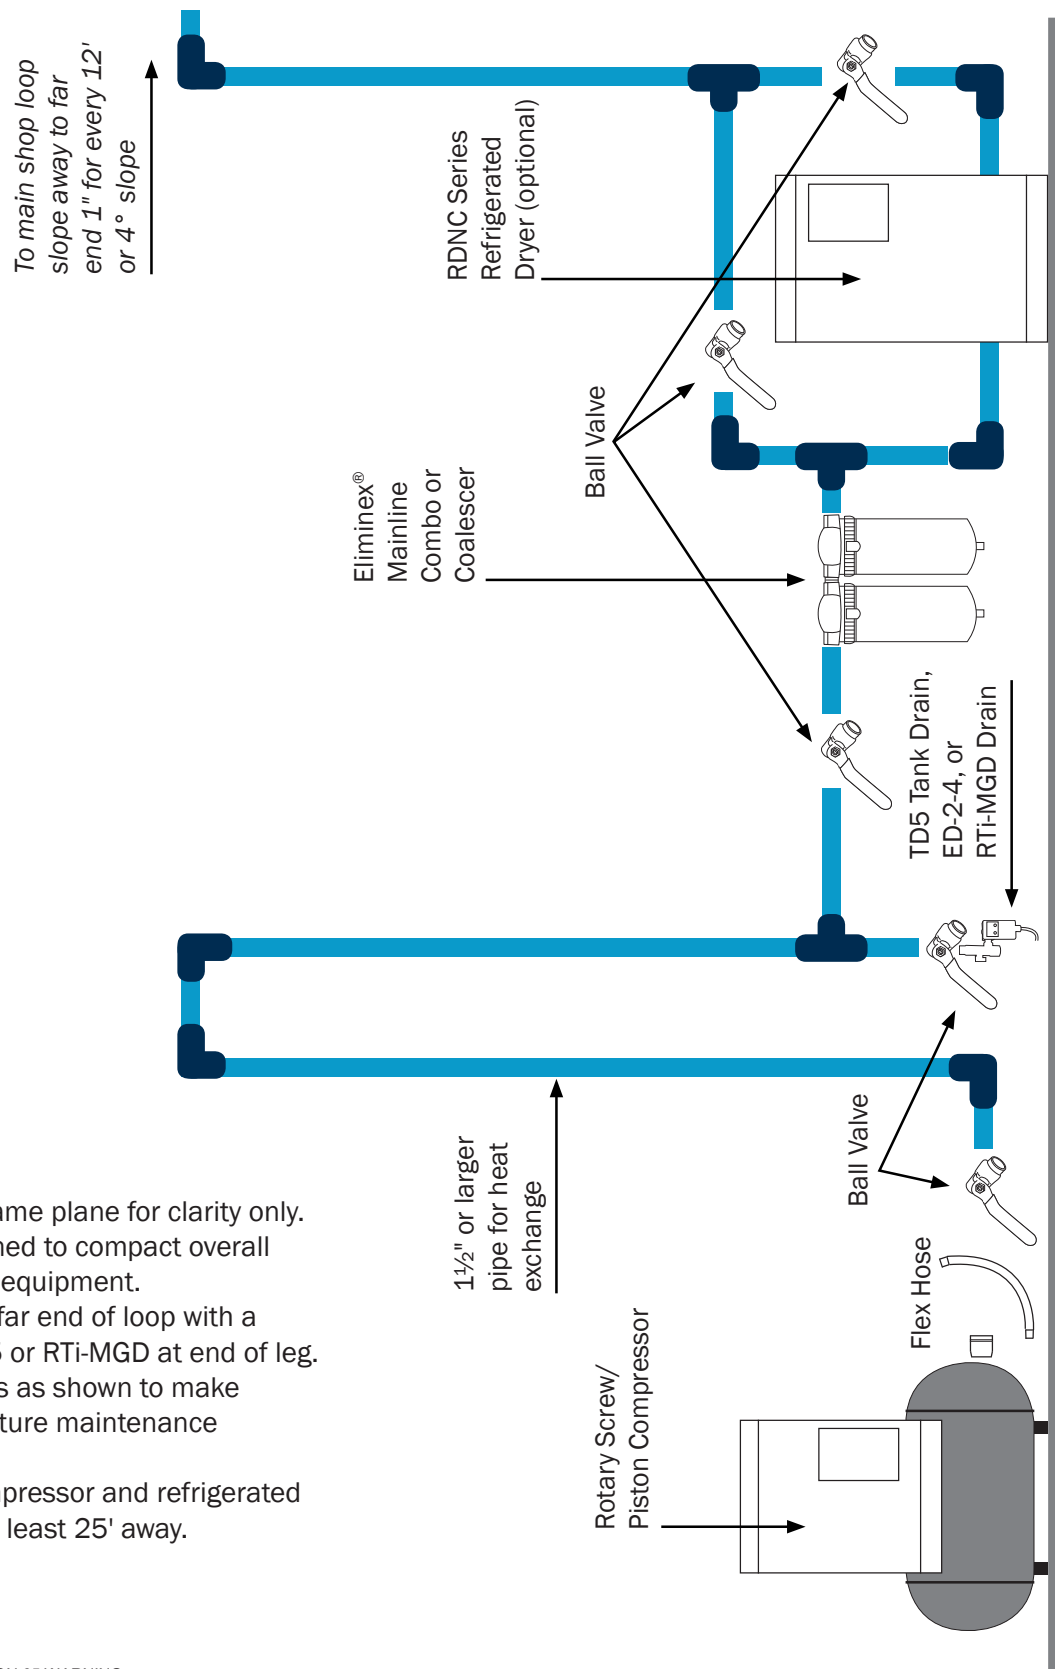

NOTES:

1. Piping shown in same plane for clarity only. Piping may be turned to compact overall length needed for equipment.
2. Locate drip leg at far end of loop with a ball valve and TD5 or RTi-MGD at end of leg.
3. Locate pipe unions as shown to make installation and future maintenance easier.
4. Pipe between compressor and refrigerated dryer should be at least 25' away.

CA PROPOSITION 65 WARNING



WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov/product



(800) 521-9200



www.driair.com | www.rti-pbe.com



@RTiPBE



@rti_pbe

